



2190 Boul. Dagenais West
LAVAL (QUEBEC)
CANADA
H7L 5X9

TEL: 514.337.4415
FAX: 514.337.4029
info@burcam.com

INSTALLATION INSTRUCTIONS

MODEL 506321

JET PUMP

Please read these instructions carefully. **Failure** to comply to instructions and **designed** operation of this system, may **void** the warranty.

Your pump has been carefully packaged at the factory to prevent damage during shipping. However, occasional damage may occur due to rough handling. **Carefully inspect your pump** for damages that could cause failures. Report any damage to your carrier or your point of purchase.

Factory set voltage 115 V
Connection voltage changing:

Before changing the voltage connection:

- A) Ensure the power to the pump is disconnected.
- B) Open motor junction box cover.
- C) Please select the up knob position for 115 V or down knob position for 230 V.

or

Pull voltage selector knob 1/4" and align arrow with desired connection voltage.

- D) Connect to appropriate voltage.

or

Push back in voltage selector knob.

- E) Close motor junction box.



SAFETY INSTRUCTIONS:

This fine pump that you have just purchased is designed from the latest in material and workmanship.

Before installation and operation, we recommend the following procedures:

- A** CHECK WITH YOUR LOCAL ELECTRICAL AND PLUMBING CODES TO ENSURE YOU COMPLY WITH THE REGULATIONS. THESE CODES HAVE BEEN DESIGNED WITH YOUR SAFETY IN MIND. BE SURE YOU COMPLY WITH THEM.
- B** WE RECOMMEND THAT A SEPARATE CIRCUIT BE LEAD FROM THE HOME ELECTRICAL DISTRIBUTION PANEL PROPERLY PROTECTED WITH A FUSE OR A CIRCUIT BREAKER. WE ALSO RECOMMEND THAT A GROUND FAULT CIRCUIT BE USED. CONSULT A LICENSED ELECTRICIAN FOR ALL WIRING.
- C** THE GROUND TERMINAL ON THE THREE PRONG PLUGS SHOULD NEVER BE REMOVED. THEY ARE SUPPLIED AND DESIGNED FOR YOUR PROTECTION.
- D** NEVER MAKE ADJUSTMENTS TO ANY ELECTRICAL APPLIANCE OR PRODUCT WITH THE POWER CONNECTED. DO NOT ONLY UNSCREW THE FUSE OR TRIP THE BREAKER, REMOVE THE POWER PLUG FROM THE RECEPTACLE.

Material required for drilled well application (indoor use only)

Shallow well pump installation

- Desired length of polyethylene 1" pipe, 100 PSI, CSA or UL approved, to link up from pumping level to pump.
- 1 1" foot valve (750756 or 750752P).
- 1 well seal, as per well casing diameter (750929 6" x 1").
- 1 1" well seal elbow (750860).
- 2 1" male adaptors (750865 or 750871).
- 8 1" stainless steel clamps (750885).
- Teflon tape.

Tank installation

- Desired length of 1" braided hose (750919) to link up from pump to tank. Keep tank as close as possible from pump.
- 1 tank T (650651).
 - 1 drain valve (650659)
 - 2 1" female adaptor.
 - 1 1" male adaptor (750865 or 750871).
 - 3 1" stainless steel clamps (750885).
 - Teflon tape.

Deep well pump installation

- Desired length of polyethylene 1" and 1 1/4" pipe, 100 PSI, CSA or UL approved, to link up from pumping level to pump.
- 1 1" foot valve (750756 or 750752P).
- 1 well seal, as per well casing diameter (750926 6" x 1 1/4" x 1").
- 1 1" well seal elbow (750860).
- 1 1 1/4" well seal elbow (750861).
- 1 1 1/4" venturi adaptor (750864).
- 2 1" male adaptors (750865 or 750871).
- 1 1 1/4" male adaptor (750872).
- 8 1" stainless steel clamps (750885).
- 8 1 1/4" stainless steel clamps (750886).
- Teflon tape.

Tools

Screwdrivers, hacksaw to cut pipe, knife to assist in pipe cutting, round file to smooth pipe ends, pipe wrench, adjustable wrench to tighten fittings, propane torch and welding material.

APPLICATIONS

- This pump is designed for shallow well installation for water level up to 25 feet, with injector screwed on pump body; or for deep well installation for water level up to 80 feet, with 2 pipes and injector down in the well.

CAPACITY AT 30 PSI:

FRICTION LOSS IN
PIPE NOT INCLUDED

SHALLOW WELL		DEEP WELL	
5'	585 US GPH		
10'	510 US GPH	30'	520 US GPH
15'	440 US GPH	40'	420 US GPH
20'	330 US GPH	50'	330 US GPH
25'	220 US GPH	80'	150 US GPH

FEATURES

- High performance brass impeller.
- Industrial motor totally enclosed, fan cooled.
- Full time connected run capacitor, to eliminate starting wear vs regular motor.
- Thermal and overload protection.
- Built for a continuous use.
- 1/2HP, 115VAC, 60Hz, 8A, 17A (when start).

INSTALLATION STEPS

STEP 1 We recommend that you install your pump in a clean and dry location where there is adequate room for servicing at a later date. Protection from freezing temperatures and good ventilation should be considered as well, to provide the pump an environment for long life. Locating the pump as close as possible to the water source will reduce friction losses encountered in the suction pipe.

Friction losses in the suction pipe must be taken into consideration when the horizontal offset is greater than 50 feet. The suction pipes should be increased from 1" to 1 1/4" and from 1 1/4" to 1 1/2". This will reduce friction losses and allow the pump to give maximum performance.

A new well should be checked to determine that it is free from sand. Sand will damage the seal and the impeller. Have your well driller clean the well before your installation.

Never run the pump dry. Damage to the seal may occur. Fill pump body and suction pipe with water before turning on the power.

THE RUN OF HORIZONTAL PIPE FROM THE TOP OF YOUR WELL INTO THE HOUSE, WHERE YOUR PUMP WILL BE LOCATED, MUST BE INSTALLED IN A TRENCH, BELOW THE FROST LEVEL OF YOUR AREA.

SHALLOW WELL APPLICATION

SEE DIAGRAM ON PAGE 8

CONTINUE ON NEXT PAGE FOR DEEP WELL APPLICATION

STEP 2 Cut the desired length of poly pipe to run from the top of the well to the pumping level. Smooth the pipe cuttings with your round file. (Check that no cut-out parts are left inside of pipe. This may block pump injector or impeller).

Tape male adaptor threads with teflon tape and thread adaptor into the foot valve.

Slide 2 stainless steel clamps over one end of pipe and use torch to soften pipe. Insert the male adaptor and foot valve into this pipe end. Tighten clamps with screwdriver when cool.

For security against leaks, we suggest to install 2 stainless steel clamps on each adaptor.

STEP 3 Insert the well seal elbow thru the opening of the seal.
Slide 2 stainless steel clamps over the free end of the previously cut pipe and soften pipe with your torch. Attach pipe to the well seal elbow (end protruding at bottom of well seal). Tighten clamps with screwdriver when cool.

STEP 4 Install the well seal and piping assembly into your well casing. Tight down the well seal bolts using your adjustable wrench.

To facilitate servicing at a later date, you may use a pitless adaptor and a sealed well cap instead of an elbow and a well seal as describe in steps 3 and 4.

STEP 5 Install your pump in the house, on a sound foundation, as close as possible to the basement wall. Locate and screw your injector body to your pump body. Locate the suction inlet in the front of the injector. Thread an adaptor into inlet using teflon tape. Do not over tighten.

STEP 6 Cut the desired length of pipe from pump location to the well seal and connect both ends using the previous way, with stainless steel clamps and torch.
Do not fill in your trench to the house until you have checked for any leaks in your connections or trouble in your water system.

STEP 7 Sand or well points are limited to areas where water bearing sand or gravel lies below the surface, and where there are no boulders or rocks to interfere with the driving into the ground of the point.

for sand
or well
points

The amount of water any "one" well point will supply is usually rather limited. Sometimes, it is necessary to use more than one point to increase the supply of water, entering to the pump's suction.

THE IMPORTANT INSTALLATION STEP IN USING WELL POINTS IS THAT A CHECK VALVE MUST BE USED IN THE SUCTION PIPE LEADING TO THE SUCTION INLET, AS CLOSE TO THE PUMP AS POSSIBLE, TO KEEP SUCTION LINE AND PUMP WELL PRIMED.

CONTINUE ON PAGE 6 & 7 FOR TANKS AND ELECTRICAL INSTALLATION STEPS

DEEP WELL APPLICATION

SEE DIAGRAM ON PAGE 9

STEP 2 Locate your injector body in your package. Using teflon tape, screw the 1 1/4" venturi adaptor over the injector venturi (black tube), into the 1 1/4" opening of injector body. Install the 1" male thread adaptor in the 1" opening in injector body. Securely tighten both adaptors with pipe wrench.

STEP 3 With teflon tape on threads, install a 1" nipple into the 1" foot valve, then screw this assembly into the 1" bottom opening of the injector.

STEP 4 Cut the desired length of 1" and 1 1/4" poly pipes to run from the top of the well to the pumping level. Smooth the pipe cuttings with your round file. (Check that no cut-out parts are left inside of pipe. This may block pump injector or impeller).
Slide 2 stainless steel clamps over one end of each pipe and use torch to soften pipe. Fix the 1" and 1 1/4" pipes respectively on the 1" adaptor and 1 1/4" venturi adaptor. Tighten clamps with screwdriver when cool. **For security against leaks, we suggest to install 2 stainless steel clamps on each adaptor.**

STEP 5 Insert both well seal elbows thru their opening of the seal.
Slide 2 stainless steel clamps over the free ends of the previously cut pipes and soften pipes with your torch. Attach pipes to the well seal elbows (ends protruding at bottom of well seal). Tighten clamps with screwdriver when cool.

To facilitate servicing at a later date, you may use a pitless adaptor and a sealed well cap instead of elbows and a well seal as describe in steps 3 and 4.

STEP 6 Install the well seal and the injector piping assembly into your well casing. Tight down the well seal bolts using your adjustable wrench.

STEP 7 Install your pump in the house, on a sound foundation, as close as possible to the basement wall. Locate the openings in the front of the pump body. Thread respectively 1" and 1 1/4" adaptors into corresponding openings using teflon tape. Do not over tighten.

STEP 8 Cut the desired length of pipes from pump location to the well seal and connect both ends using the previous way, with stainless steel clamps and torch.
Do not fill in your trench to the house until you have checked for any leaks in your connections or trouble in your water system.

CONTINUE ON PAGE 6 & 7 FOR TANKS AND ELECTRICAL INSTALLATION STEPS

TANKS INSTALLATION

SEE DIAGRAM ON PAGE 10

STEP 9 for captive air tanks

Packaged systems have the pump mounted directly to the tank. The pump to tank plumbing fittings are pre-assembled in factory. You only have to connect the discharge line of your system to your home's plumbing distribution line.

When using a separate tank from your pump, we recommend to install a captive air tank as shown in our typical installation diagram, that is air injected into the tank at the factory. This air, which is in addition to atmospheric pressure, increase the ability of the tank to deliver more water between on/off cycles, thus increasing the efficiency of your water system. Connect the pump discharge to the tank T, using adaptors and braided hose, then, connect the other side of tank T to your home's plumbing distribution line.

Make sure that the precharged air pressure (before connecting the tank) is 2PSI less than the starting pressure setted on the pressure switch of your pump.

If you adjust the air pressure after the installation, follow these steps:

- Check the starting pressure of the pump on the pressure gauge;
- Disconnect the power to the pump;
- Open nearest fawcet to the tank and relieve all pressure in tank, then close the fawcet;
- Adjust the air pressure of the tank (by pumping or removing air at the sniffer valve) 2 PSI below pressure switch "ON" setting;
- Turn power back on to pump.

Your tank is now well precharged. Run the pump through a few cycles to verify that it works properly.

STEP 9 for epoxy or glass lined tanks

Other types of tanks may be used, as galvanized standard tanks, epoxy or glass lined tanks. These products do not achieve the benefits of the captive air tanks.

Epoxy or glass lined tanks with float have to be precharged by the installer. Assuming tank is plumbed to pump and all connections are checked for leaks, follow these steps:

- Run pump thru one complete cycle, until pump shuts off;
- Disconnect the power to the pump;
- Open nearest fawcet to the tank and relieve all pressure in tank, then close the fawcet;
- Close service line gate valve;
- With a car tire pump, inject air into the sniffer valve located in tank. Watch pump pressure gauge and stop pumping air when pressure reaches 2 PSI below pressure switch "ON" setting;
- Return power back on to pump;
- Run pump through one complete cycle;
- Open service line gate valve.


Your tank is now well precharged. Run the pump through a few cycles to verify that it works properly.

Not recom- mended for galvanized- tanks

Galvanized standard tanks require an air volume control to be used with jet pump. We do not recommend the installation of this type of tank with your jet pump. This type of galvanized tank is recommended with piston pumps.

ELECTRICAL INSTALLATION

STEP 10

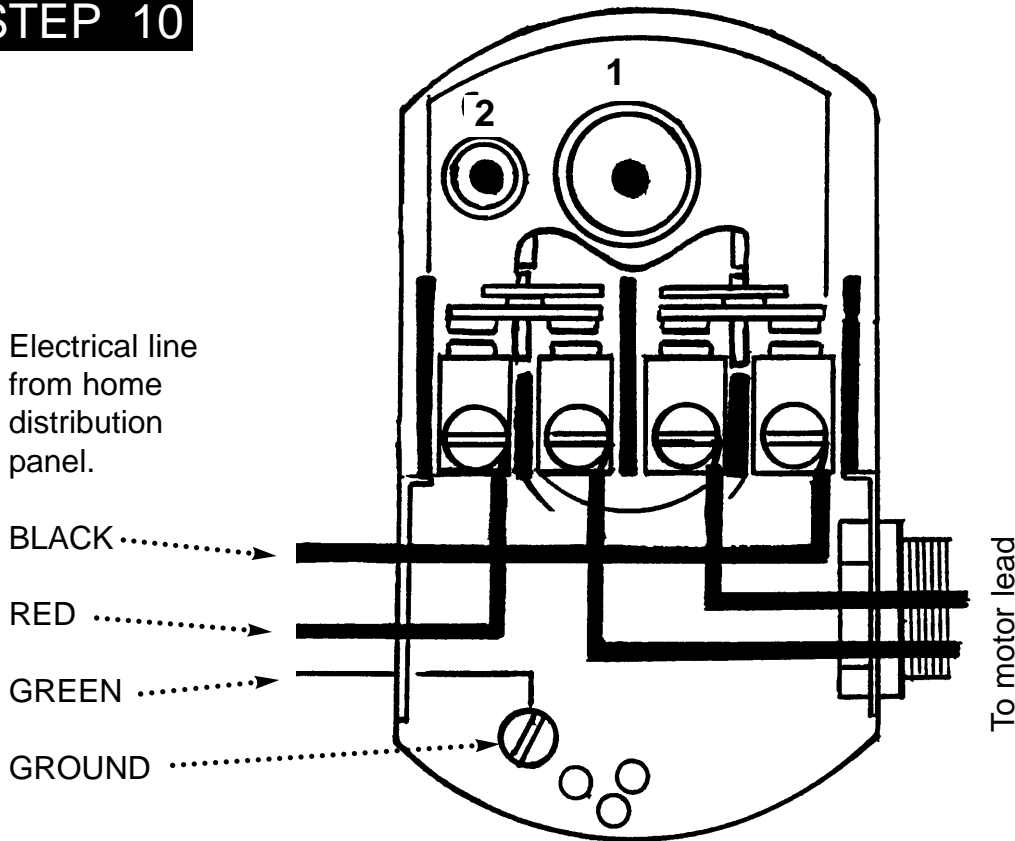


VOLTAGE SELECTION SWITCH Models after 2006

1. POWER off
2. PULL selector plug out
3. Please SELECT the up knob position for 115 V or down knob position for 230 V.
4. PUSH plug in to desired voltage.



VOLTAGE SELECTION SWITCH Models before 2006

1. POWER off
2. PULL selector plug out
3. ROTATE plug to align arrow to desired voltage
4. PUSH plug in to desired voltage.

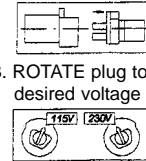

We recommend that a licensed electrician be employed to do wiring to the pressure switch. Permanently ground the motor in accordance to the electrical codes for your area.

Do not use an extension cord to connect your pump to the power source. From your distribution panel to the pressure switch, we recommend a wire gauge not smaller than 14 gauge.


Pressure switch setting (start/stop 20/40 or 30/50) has been made in factory. An adjustment may be done to give other operating pressures.

Adjustment or modification of start/stop setting of pressure switch have to be done carefully. **Turn adjustment nut half turn at a time.**

Turn nut 1 clockwise to raise start and stop pressure setting. **Never turn nut 2. This will change the 20 PSI range between start and stop pressure and may damage your tank's bladder or modify the efficiency of your water system.** Check system operation after each adjustment.

SHALLOW WELL APPLICATION

CONTINUE ON PAGE 9 FOR DEEP WELL APPLICATION

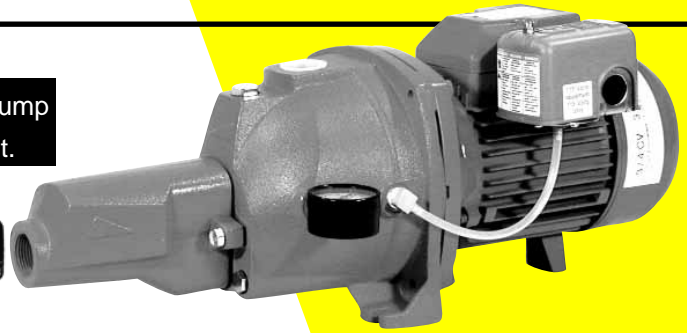

STEP 5 Install your pump and thread an adaptor into inlet.

STEP 6 Cut poly pipe and connect both ends.

STEP 3 Insert well seal elbow thru the seal and attach to pipe.



STEP 4 Install well seal and piping into well casing.

STEP 2 Cut poly pipe and install the check valve.

Well point optional installation


STEP 7 You may install one or more sand points to increase the supply of water.

Check valve, close to pump.

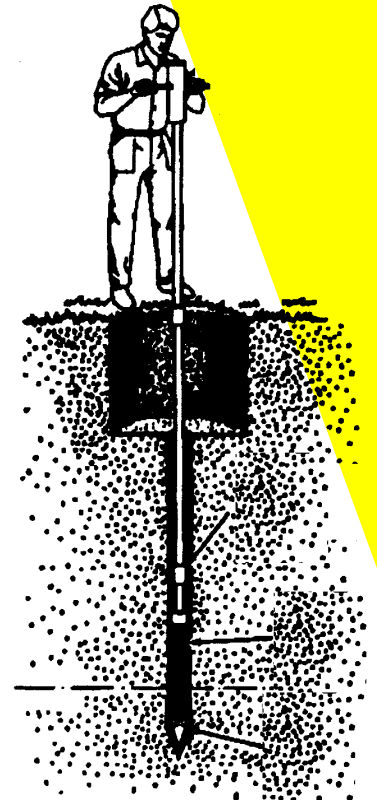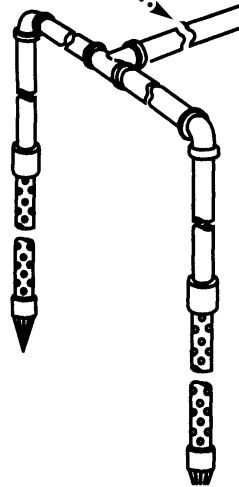

DEEP WELL APPLICATION

STEP 7 Install your pump and thread adaptors into their respective opening.

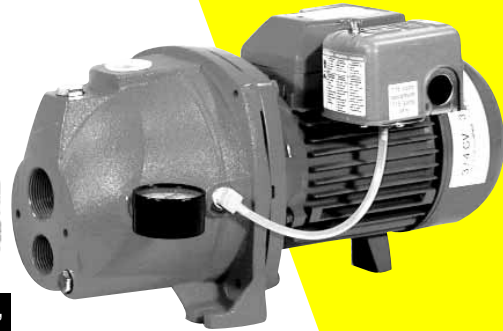

STEP 8 Cut 1" and 1 1/4" poly pipes and connect both ends.



STEP 5 Insert well seal elbows thru the seal and attach to pipes.

STEP 6 Install well seal and piping into well casing.


STEP 4 Cut 1" and 1 1/4" poly pipes.

STEP 2 Screw 1 1/4" venturi adaptor and 1" adaptor into injector body.

STEP 3 Install 1" nipple into 1" foot valve, then screw in injector.

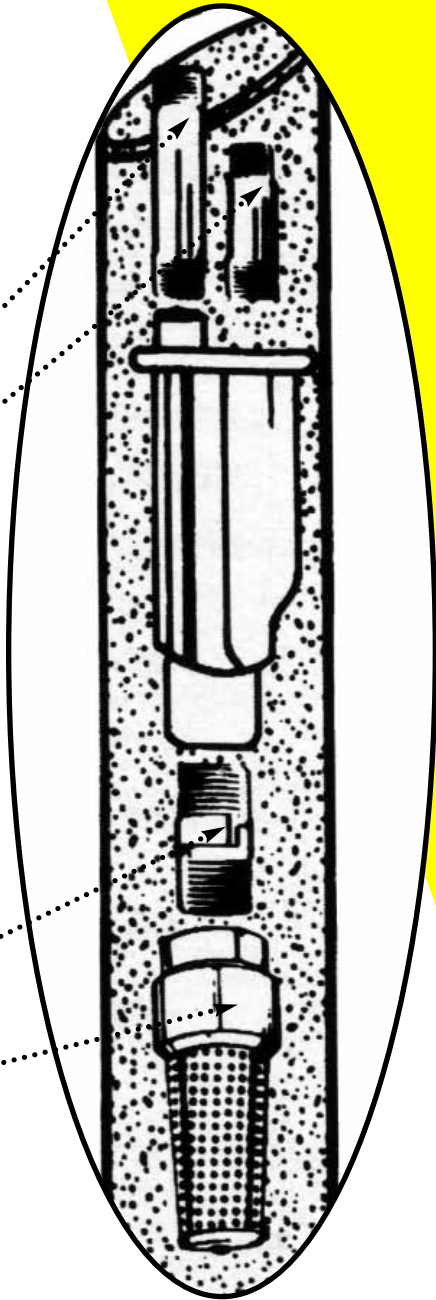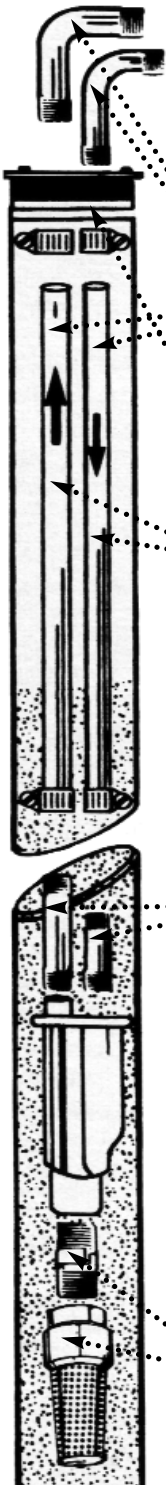

TANK INSTALLATION

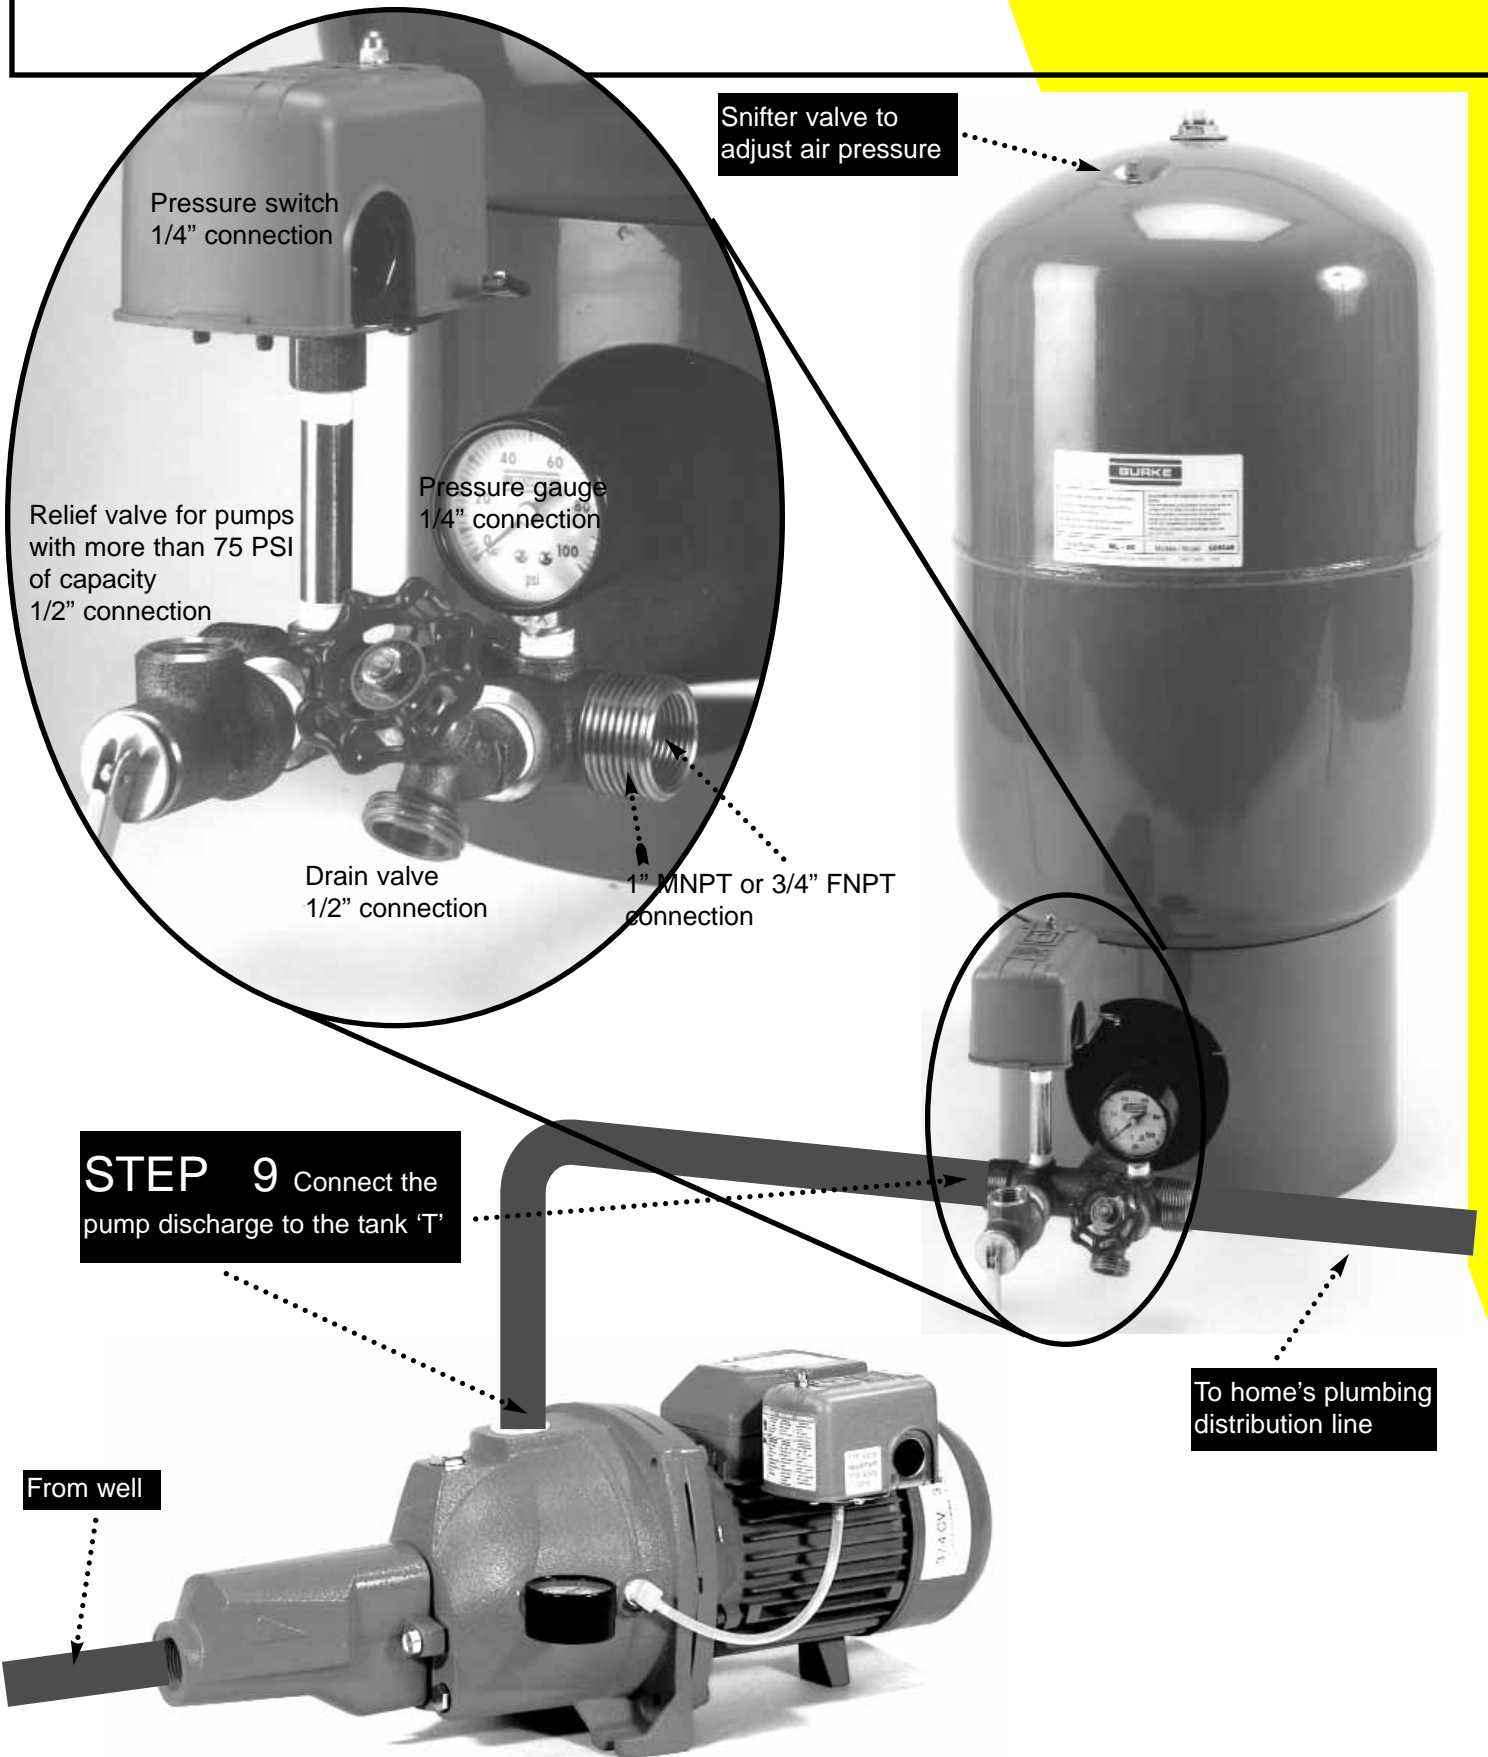

STEP 9 Connect the pump discharge to the tank 'T'

Sniffer valve to adjust air pressure

Pressure switch 1/4" connection

Relief valve for pumps with more than 75 PSI of capacity 1/2" connection

Pressure gauge 1/4" connection

Drain valve 1/2" connection


1" MNPT or 3/4" FNPT connection

To home's plumbing distribution line

From well

REPAIR PARTS

#	REF.	DESCRIPTION	#	REF.	DESCRIPTION
1	506014OS	Junction cover box	18	506317	Diffuser
1	506014	Junction cover box	19	506298	Diffuser "O" ring
2	506015	Motor capacitor	20	506300	Priming plug
3	506065OS	Capacitor junction box	21	506400	Priming plug washer
3	506065	Capacitor junction box	22	506286	C.I. pump body
4	506030GP	Stator	23	506308	"O" ring, nozzle and venturi
5	506297	Pump body cap screw	24	506306	Ejector body (only)
6	506307	Ejector gasket	25	506312	Motor foot
7	506299	Drain plug	26	506031	Pump side motor bearing
8	506315	Drain plug washer	27	506314GP	Rotor
9	506022	Impeller nut	28	506032	Fan side motor bearing
10	506294P	Impeller 1/2 HP	29	506296	Motor end bell
11	506411	Seal snap ring	30	506017	Motor fan
12	506026	Sand slinger	31	506016	Fan cover
13	506415	Ejector body screws (4)	32	506094	Selector 115/230V
14	506289	Pump bracket	32	506093	Selector 115/230V
15	506287	Seal plate	32	506093OS	Selector 115/230V
16	506288	Pump body "O" ring	33	506430	Screws (3)
17	506309	Mechanical seal	34	506318	Impeller shaft key
			35	506419	Cover bolt

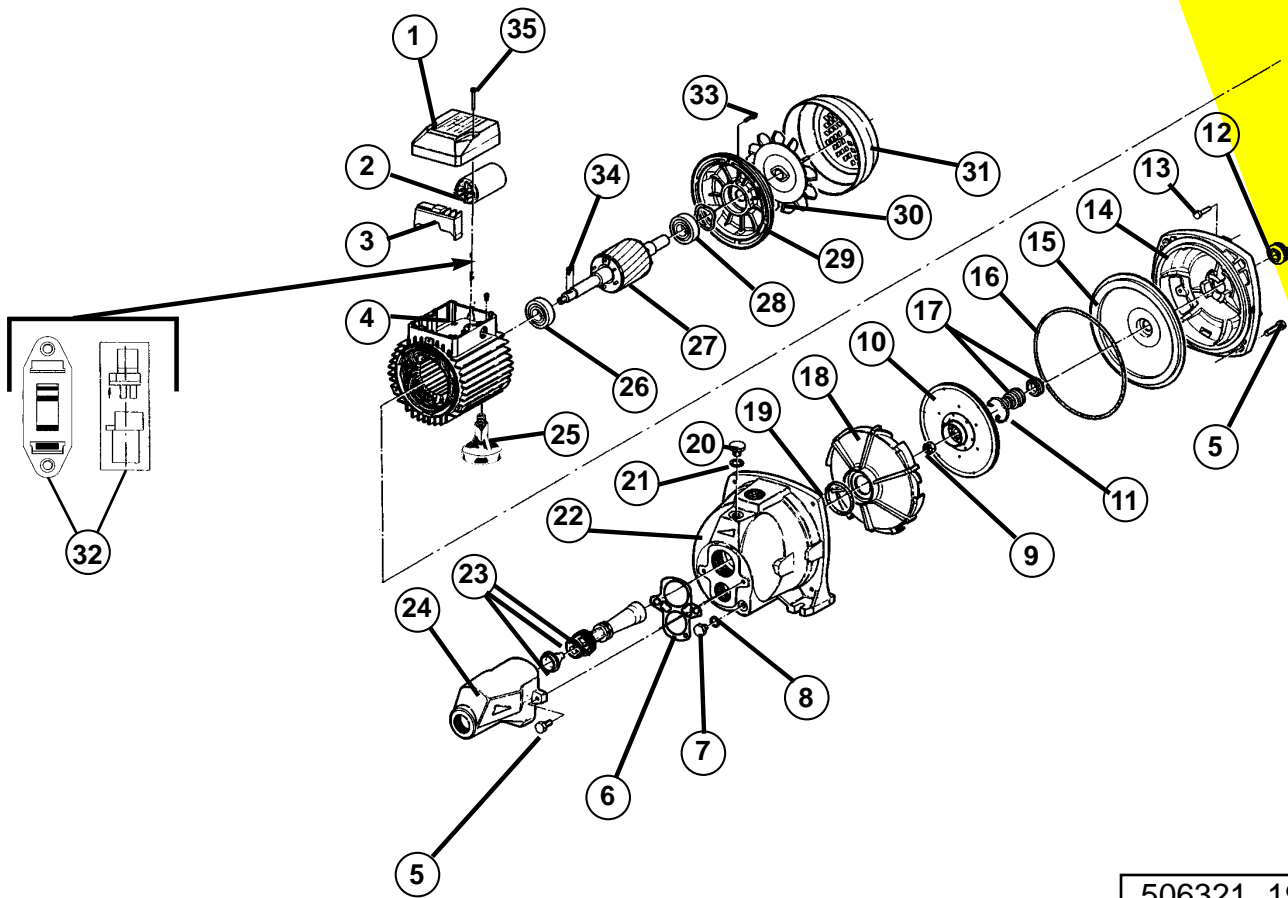

Repair parts may be ordered from your authorized point of sale or from
BUR-CAM PUMPS

TROUBLE SHOOTING GUIDE CHECKLIST

NEVER MAKE ADJUSTMENTS TO ANY ELECTRICAL APPLIANCE OR PRODUCT WITH THE POWER CONNECTED. DON'T JUST UNSCREW THE FUSE OR TRIP THE BREAKER, REMOVE THE POWER FROM THE RECEPTACLE.

TROUBLE	PROBABLE CAUSE	ACTION
Motor does not run.	<ul style="list-style-type: none"> Switch is off position Blown fuse Tripped breaker Dirty pressure switch Defective pressure switch Defective motor 	<ul style="list-style-type: none"> Turn switch to on position Replace Reset Clean Replace Replace
Motor runs but no water is delivered.	<ul style="list-style-type: none"> Pump not primed Leaky suction line Foot valve plugged Ejector nozzle clogged Water level below foot valve Suction lift to great Improper voltage 	<ul style="list-style-type: none"> Prime with clean water Check pipe and pipe connections Clean Clean Check foot valve level Water level lower than lift capacity Check voltage
Pump does not deliver to full capacity.	<ul style="list-style-type: none"> Water level below foot valve Ejector nozzle clogged Excessive friction in pipe Improper voltage 	<ul style="list-style-type: none"> Check foot valve level Clean Too small or dirty pipe Check voltage
Pump does not shut off.	<ul style="list-style-type: none"> Leaky discharge line Motor not up to normal speed Improper setting of pressure switch Ejector nozzle clogged 	<ul style="list-style-type: none"> Check all pipes for leak Check power cable and voltage Reset or replace Clean
Pump starts and stop too often.	<ul style="list-style-type: none"> Pressure tank waterlogged Leaky foot valve Leaky suction line Foot valve do not close properly Pressure switch out of adjustment Leaky discharge line (toilet etc.) 	<ul style="list-style-type: none"> Drain tank and restart Replace Check pipe and pipe connections Clean or replace Adjust on/off setting Check all pipes for leak
Air spurts from faucets.	<ul style="list-style-type: none"> Leaky suction line Gaz in water Airlogged tank (galvanized) 	<ul style="list-style-type: none"> Check pipe and pipe connections Check and consult factory Replace air volume control

TO THE END CONSUMER

If you have any problems with the product, before advising the store, where you've purchased the pump, please contact us at 514 337-4415 , and ask for our sales department, and they will be pleased to help you with any questions you might have, concerning your installation.